
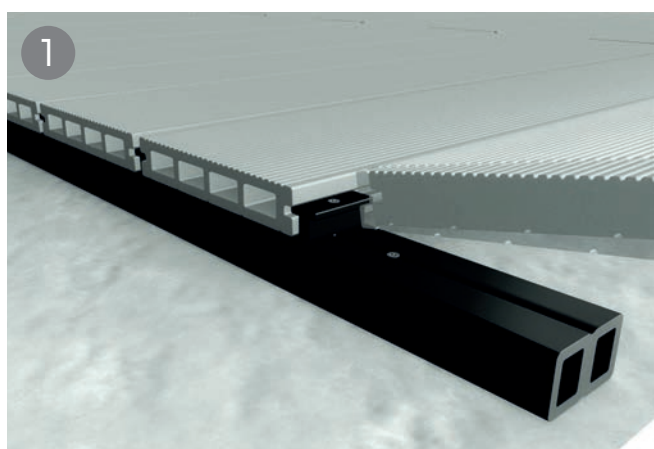


Bullnose installation guide


Cladco composite bullnose decking boards are designed to give your decking project a professional finish to its borders. The rounded bullnose design creates a neat edge that can be used with original, woodgrain or solid composite decking projects. Bullnose boards can be used into a picture frame effect as a different colour to the main deck, or in a complementary shade to blend in.

Bullnose boards are particular good for steps and can be used around the edge of the deck as a fascia.


Read our simple guide on how to fit these boards.

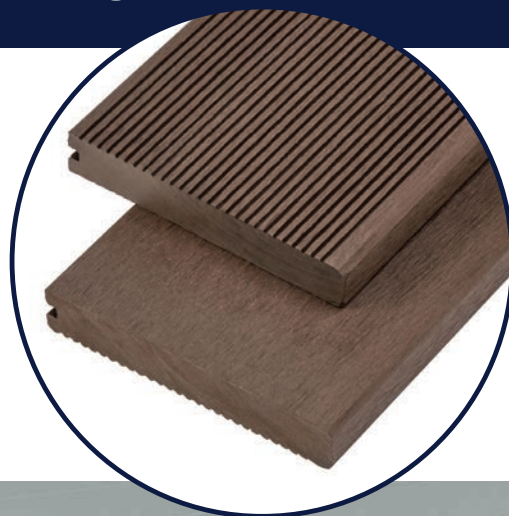

Step 1, after the last board of the main project has been laid, screw in a T clip along the edge of the final board. The bullnose board can then be inserted next to it.

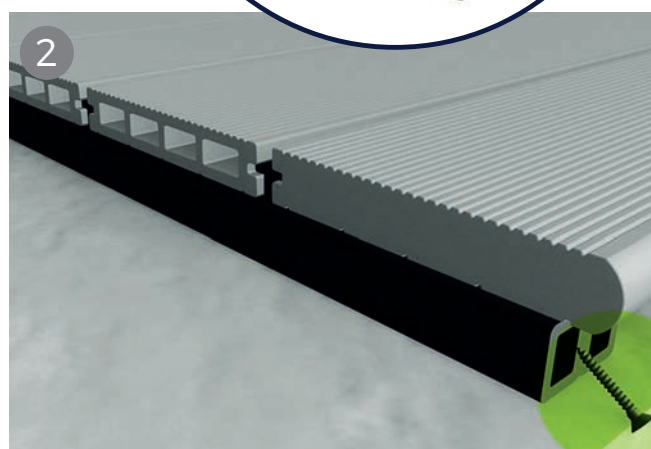


Step 2, once the bullnose board is placed you will need to insert a screw at an angle through the supporting joist underneath the board. Ensure the bullnose board is supported along the length with joists and a screw is inserted into each one.

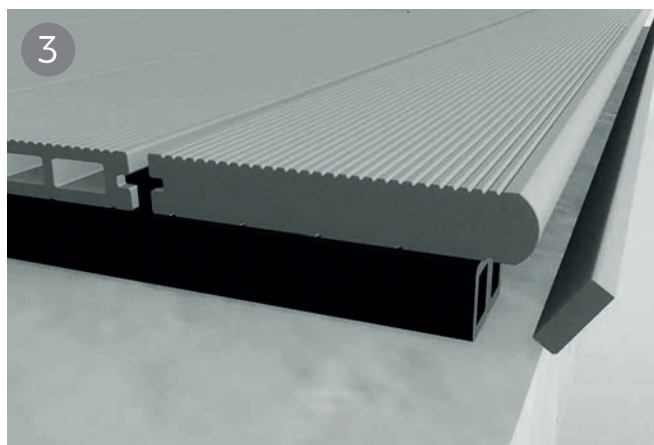

Step 3, once the bullnose board has been secured into place you can use a skirting board to neaten the edge. For higher areas you may wish to use a decking board as an edge.

Secure the skirting edge with either a screw into each joist or using sumo grip adhesive.

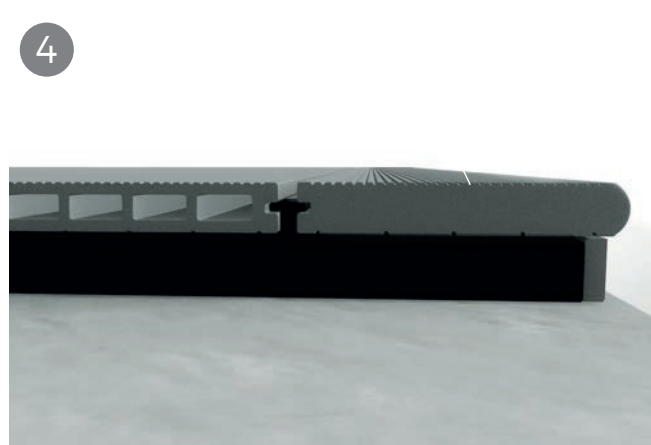

Step 4, once the bullnose board is in place and the fascia secure you can then admire your work. Dont forget to finish off hollow ends of decking with an end cap or corner trim. For information on how to install the rest of the decking, please visit our website.



Order online at www.wpc-decking.co.uk
Call us on 01837 659901

Please always consult a professional before installing Cladco Products

CLADCO
DECKING